


How to measure your filter cartridge.

- A.** Measure the outside diameter of the cartridge. (+/- 1/16 inches or +/- 1.6 mm)
 - B.** Measure the overall length of the cartridge (+/- 1/16 inches or +/- 1.6 mm) including the end caps.
Do not include any handles, strings, etc.
- A more accurate measurement is made by measuring through the center of the cartridge when possible.
- C.** If the top and/or bottom is open, measure the inside diameter of the opening (+/- 1/16 inches or +/- 1.6 mm).
Match the cartridge end cap configuration to a corresponding one in the complete end cap gallery.
 - D.** Make note of the manufacturer (OEM) and model number of the filter the replacement cartridge will be installed in.
 - E.** Take note whether or not there is a center core in center. Also count the number of pleats (+/- 1/16 inches or +/- 1.6 mm)

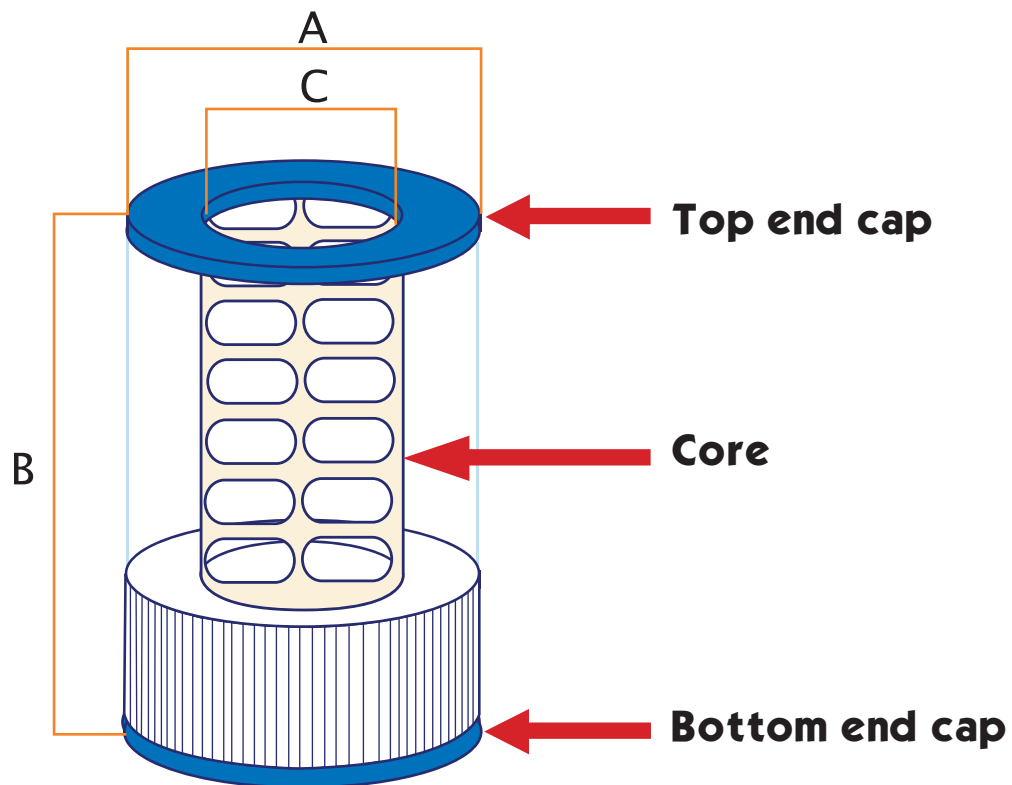

Please Note: Filter Cartridge Measurements may vary.
Always allow a variance of :
(+/- 1/16 inches or +/- 1.6 mm)